

## **THE HEADER TARGET**

**(REAR VIEW & ADJUSTMENTS FOR SYNTHETIC SURFACES)**

**The Header Target is the rear view of the target which identifies the adjustment and stabilization of the target when setting up the target to be placed for Synthetic Surfaces.**

**The stabilizing pins for grass surface has been raised level to the main plate and stowed as shown in the diagram by the hinge action deriving from off the lower arm of the coil spring. No other attention is required in this area once the stabilizing pin has been stowed.**

**To completely stabilize the target for Synthetic Surfaces, RB-51 Sticky Tape cut to 9cm long is applied across each main plate only as shown in the diagram as no other application is required once the targets have been set.**

**When the bowl directly passes over the target, the coil spring contracts with the plastic disc completely, covering the base plate in this area allowing the bowl to continue on its directed course without any influence from the target itself.**

**Before reverting to The Header Target for a grass surface, fold the sticky ends under each plate for reuse as there is no need to remove the tape. Once again there will be no influences from the target as explained in the above paragraph.**

**The adjustments from Grass to Synthetic Surface are simple and quick with the optional configurations to suit your own programs in which four targets can be set at the one time with various configurations including forehand and backhand shot practices.**



# THE HEADER SYNTHETIC

(REAR VIEW & ADJUSTMENTS FOR SYNTHETIC SURFACES)

